
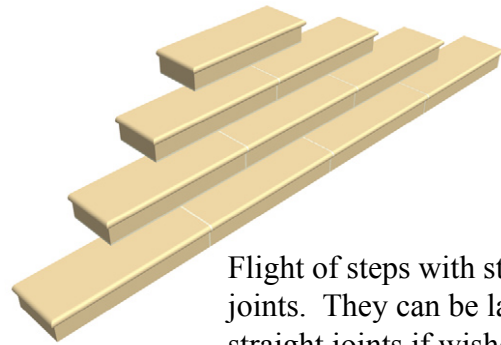


Information Sheet Steps

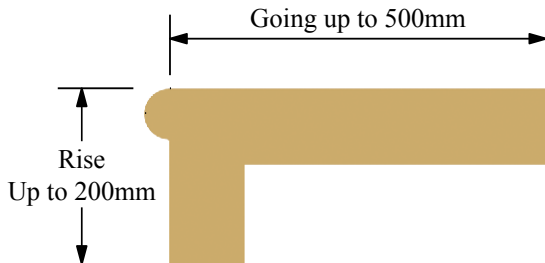

Flight of steps with staggered joints. They can be laid with straight joints if wished.

Information Thorverton Stone requires to manufacture Steps

- The rise and going (see picture) for the steps.
- The number of corners / end steps required.
- The number of steps required in total.
- The width of the steps or the width of the total area to have steps on.

Useful Information

- The tread on our steps is typically 60mm thick.
- All steps are stainless steel reinforced.
- Our standard step is bull nosed with an integral riser.
- The steps adhere to a standard county council “non-slip specification.”
- The steps need to sit on either preformed steps or stringers. Stringers should be placed under joints, under edges and at approximately 500mm centres.
- Maximum width of a step is 1150mm.
- Steps may be laid with straight or staggered joints.